

Dexter A-Series Washer Preventative Maintenance

Requirements

Make sure all machine power is disconnected before making checks inside the machine.

DAILY

- 1. Check that the door remains securely locked during the entire cycle.
- 2. Clean the cabinet top around soap dispenser.
- 3. Clean the soap dispenser and soap lid and check that all dispenser mounting screws are in place and tight.
- 4. Check the drain for leaking and proper draining.
- 5. Check the water connections for leaks.
- 6. Check door seal for foreign material.
- 7. Leave the loading door open to aerate the washer when not in use.

QUARTERLY

- 1. Check the drive belt for wear and proper tension.
- 2. Clean lint and other foreign material from around drive motor.
- 3. Remove water inlet hose filter screens and clean or replace as necessary.
- 4. Check all electrical components for moisture and wipe away any foreign debris.

ANNUALLY

- 1. Clean and remove lint and foreign debris from outside cover of VFD with a dry clean rag or dry brush.
- 2. Inspect all wire connections especially at relays, terminal connections and circuit boards for tightness.
- 3. Inspect and check tightness of mounting bolts that mount washer frames to floor.

After any service, be sure to reinstall all panels and safety screens before reconnecting power.